

Thanks for trying our products! We know you'll love G2 quality and innovation.

Here is our full range of G2 products. To order or learn more, please log on at www.g2ergo.com.



Quick-Turn Throttle Tube
Opens faster than stock!



Billet Replacement Throttle Tube
2 piece design allows cam adjustability!




Competition Handguard System
Unique clamp design allows better cable routing!!



Nylon Bar End Mount Kit
Best handguard mounts...period!



Billet Grip Protector
Stop changing grips after every wipe-out!

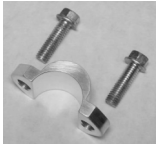

Control Perch Spacer
Improved lever fit for big hands!

Billet Grip Protectors (Installation instructions)

1) The grip ends may need to be removed to allow access to handlebar ends for thread tapping. If throttle tube does not have an open end or removable end cap, the end of tube must be removed. A "5/8 X 11 American tap" (included with Nylon Bar End Mount Kit) is needed to thread the inside of both handlebar ends.

2) For best results, secure handlebars vertically in a bench vice. A second option is to leave handlebars installed in triple clamps, and lay bike on it's side. Keeping the handlebars vertical allows aluminum chips to fall away from tap, thus making tapping procedure require less force.

****IMPORTANT**** Make sure tap follows center line of handlebar I.D. Starting the tap at an angle to center line I.D. may not allow mounts to install properly.

3) Matching tap to center line of handlebar end I.D., rotate tap clockwise until top thread is 1/16" past flush with end of handlebar. Approximately every 1/2 turn, turn tap back counterclockwise to "break chips" for easier tapping. Using a light oil like WD-40 also helps. Remove tap when threading is completed.

4) Using an 8mm or 5/16 allen wrench, turn the nylon bar end mount into the end of handlebar until you can feel it tighten or it becomes flush with the end of the bar.

****IMPORTANT**** make sure the wrench is securely installed all of the way into the nylon bar end mount).

**** IMPORTANT**** Nylon bar end mounts DO NOT NEED TO "BOTTOM" OR "FIT TIGHT"! If more than 4ft/lb torque is applied to nylon bar end mount before flush with handlebar end is reached, remove mount and tap inner handlebar an additional 1/2". The nylon bar end mounts DO NOT need to be "tight". It is not the tightness of the mounts at this time of the application that will secure your hand guards.

5) You are now ready to install your Grip Protectors. Using a 5mm allen wrench, insert the countersunk bolt (included) into the Grip Protector (with countersunk side of Grip Protector facing away from grip). Tighten the allen bolt into the mount, then repeat for other side.

****WARNING** make sure throttle assembly is mounted properly so that no part of throttle tube or grip contacts the handguard or grip protector.**

****IMPORTANT**** Azonic double wall and Renthal Twin Tube bars are a larger ID than other aluminum bars and WILL NOT WORK with this product.

For more information, please logon to www.g2ergo.com, or see your local dealer.